 


Connect Ultrasatan to 5V micro usb (mobile phone charger) and turn on. NO SD CARDS



GREEN LIGHT ON



Change power supply; if not helps micro usb socket damaged or device broken. RMA : <https://lotharek.pl/page1.php> / <https://lotharek.pl/productdetail.php?id=242>



RED LEDS FLASH ONCE THE SAME TIME



Firmware corrupted (99,9% cases) or device broken

FIRMWARE restore solutions:

- Restore firmware using simple tool: <https://lotharek.pl/productdetail.php?id=344>
- RMA: <https://lotharek.pl/page1.php> <https://lotharek.pl/productdetail.php?id=292>.



- TURN OFF device
- Insert SD CARD
- TURN ON

1. Red leds flash the same time
2. One led flashes second time (sd card detected)



Firmware corrupted (99,9% cases) or device broken

FIRMWARE restore solutions:

- Restore firmware using simple tool: <https://lotharek.pl/productdetail.php?id=344>
- RMA: <https://lotharek.pl/page1.php> <https://lotharek.pl/productdetail.php?id=292>.



- Connect u-satan to ATARI
- Power ON
- System loaded



- Faulty SD CARD or DATA corrupted. Please, restore image (down of the page) <https://lotharek.pl/productdetail.php?id=48#faq>
- Faulty connection cable or dirty Atari connector
➔ Clean ATARI connector



Another problem ?
My www → u-satan → ASK button
→ TECHNICAL SUPPORT